


INTERCONNECTION DIAGRAM AND TRIM POT LOCATIONS

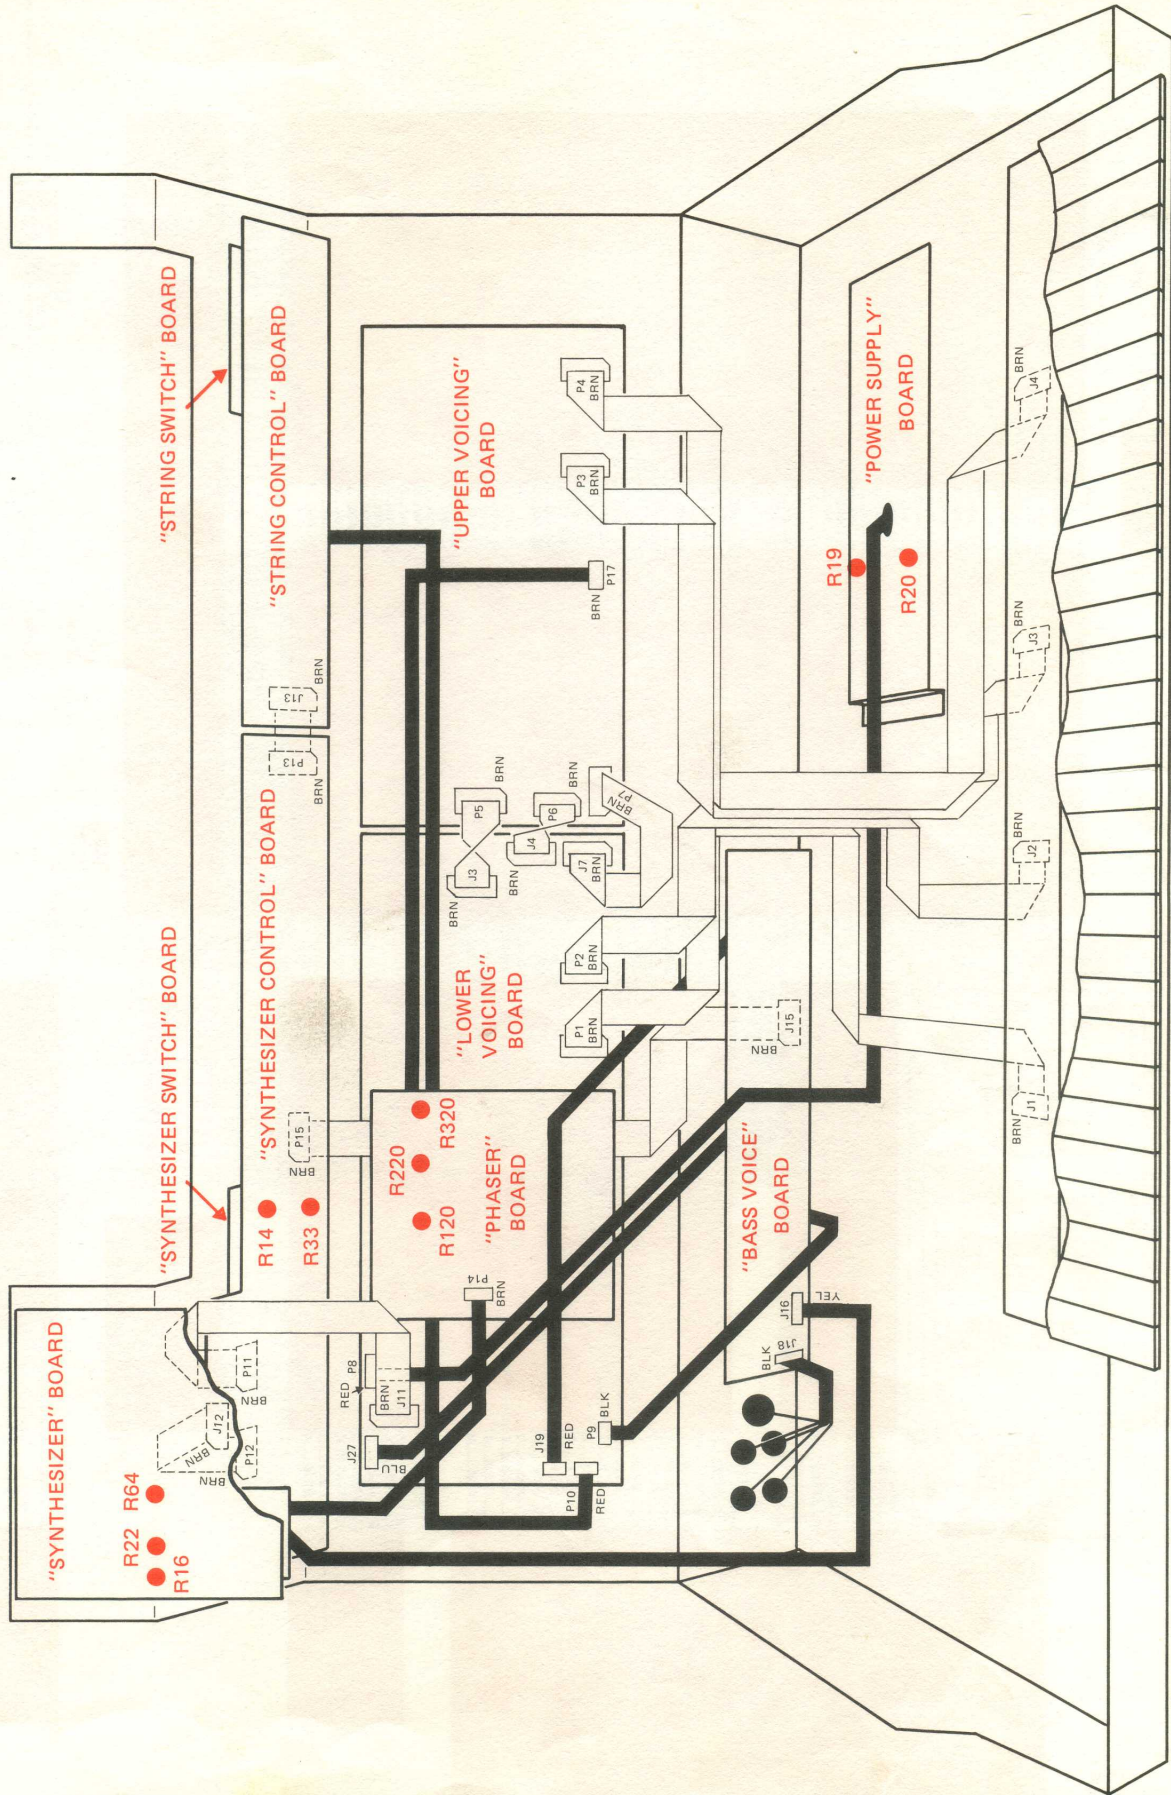

NOTE: Regardless of orientation of socket, pin 1 of key board connectors should always face the rear of the instrument.