


HEATHKIT[®] MANUAL

for the

COLOR GENERATOR

Model IG-5240

595-1875-2

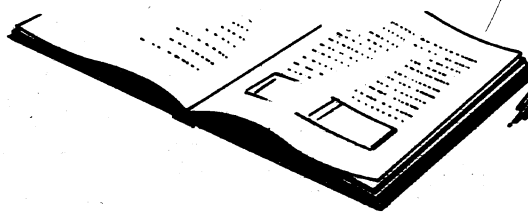

HEATH COMPANY • BENTON HARBOR, MICHIGAN

INITIAL TESTS AND ADJUSTMENTS

NOTES:

1. A properly aligned and operating color television set is required for alignment of the Generator.
2. When the Generator is operating with the top housing removed, hand capacitance and stray radiation may distort the selected pattern display on the television screen. It may be necessary to lay the Generator down and/or position it in a particular direction after each adjustment.
3. The number of vertical and/or horizontal lines, color bars, and dots displayed on the television screen will depend on the overscan characteristics of the television used. The intensity ratio of vertical lines to horizontal lines will depend on the setting of the television video peaking and fine tuning.
4. If you do not obtain the specified results in the following steps, refer to the "In Case of Difficulty" section on Page 45.
 - () Turn your television set on and tune in a VHF station that has a good color signal.
 - () Switch off the user accessible automatic control circuits (automatic fine tuning, etc.). With these controls off, adjust the fine tuning, color, tint, contrast, and brightness controls for a good picture with correct flesh tones.

- () Disconnect the VHF antenna from the television set and connect the Generator 2-wire cable in its place. Then turn the television channel selector to channel 4 (channel 3 optional).

NOTE: The four slide switches on the video circuit board are used to program the output signal. The switch positions are identified by a 1 and a 0. When a switch is in position 1, the switch lever will be toward the batteries; in position 0, the lever will be away from the batteries.

When you are instructed to select a signal, the switch positions will be identified with a 1/0 code. For example, "1010" indicates that:

- The left switch is in position 1.
- The center left switch is in position 0.
- The center right switch is in position 1.
- The right switch is in position 0.

Locate the trim label; it identifies the approximate television picture produced by each switch program.

- () Refer to Figure 3 and preset the controls and switches as follows:

- VIDEO LEVEL control R18 — 3/4-turn counterclockwise.
- COLOR LEVEL control R17 — Fully counterclockwise.
- COLOR ADJUST trimmer C9 — Disregard.
- RF OSCILLATOR control inductor L2 — With the alignment tool supplied, turn the slug out until its end is flush with the end of the coil form.

- Program switch SW104 — 1.
- Program switch SW103 — 0.
- Program switch SW102 — 1.
- Program switch SW101 — 0.
- ON pushbutton switch SW202 — Disregard.
- OFF pushbutton switch SW201 — Press momentarily.

- () Switch the Generator on (momentarily press ON pushbutton switch). Either a blank raster or snow will be displayed on the picture tube. If a blank raster display is visible, turn the tuning slug of RF Oscillator control inductor L2 out of the end of the coil form until a snow pattern is displayed. NOTE: After a period of time (five minutes minimum), the Generator will turn itself off. If you have not completed the test when this occurs, switch the Generator on again.
- () Slowly turn the tuning slug of inductor L2 clockwise until you observe a blank raster on the picture tube. Note the position of the slug. Then adjust the slug 1/4-turn clockwise. NOTE: It may be necessary to readjust the television fine tuning to produce a blank raster.
- () Switch the Generator off (momentarily press the OFF pushbutton switch). The blank raster should disappear.
- () Switch the Generator on. The blank raster should reappear.

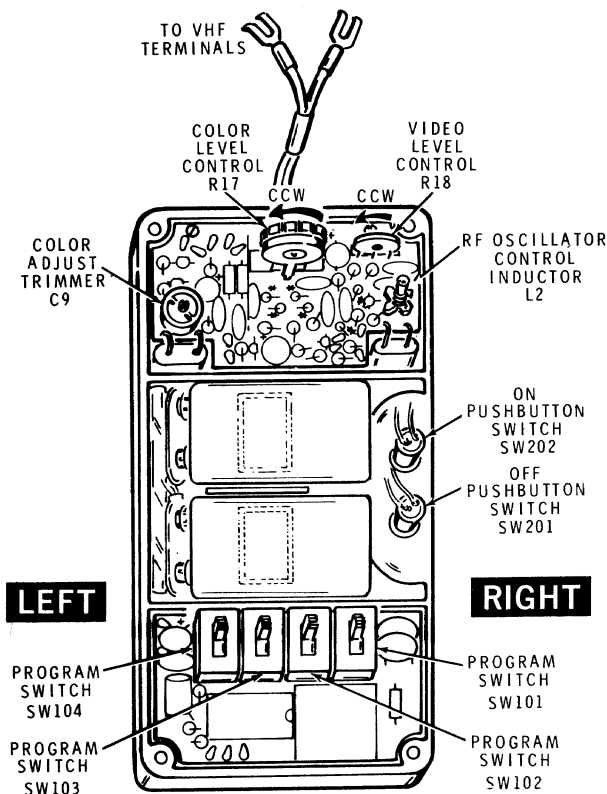


Figure 3

- () Change the program switches to "0101." The picture tube should display vertical and horizontal lines. NOTE: The vertical and horizontal lines may not have equal intensity, and it may be necessary to readjust the television brightness and fine tuning to see both lines.
- () Adjust the television fine tuning control and brightness control for maximum line intensity with equal line widths, and minimum line distortion.
- () Rotate the wiper of VIDEO LEVEL control R18 through its entire range and note where the display begins to distort. Then set the wiper to the center of its undistorted range.
- () Change the program switches to "0001." The picture tube should display up to ten vertical color bars that may or may not have a color hue. Turn COLOR ADJUST trimmer C9 so the color bars are as indicated in Figure 4 on Page 43. (You may only see eight or nine color bars.) It may be necessary to readjust the television fine tuning, color level, or color killer to obtain color.

- () Adjust the television fine tuning, inductor L2, and control R18 for minimum display distortion.
- () Turn trimmer C9 through its entire range and note where the color disappears from the display. Then set the trimmer to the center of its color range.

NOTE: It may be necessary to fine tune the television when switching between color and black and white patterns.

- () Using the trim label as a reference, program each of the sixteen output signals to verify their operation. NOTE: The illustrations showing more than one dot, horizontal line, vertical line, or cross-hatch indicate only the relative density of the pattern. They do not indicate the exact number displayed.
- () Press the OFF pushbutton.

This completes "Initial Tests and Adjustments." Proceed to "Final Assembly."

OPERATION

The Model IG-5240 Color Generator is a 16-function instrument capable of supplying the modulated RF signals necessary for television alignment. The RF carrier frequency is calibrated for channel 4 (channel 3 can be incorporated as an option). A unique control circuit* turns the Generator off after a 5-minute (minimum) interval. This helps to conserve battery power if the generator is accidentally left on.

BATTERY

Two 9-volt transistor batteries, NEDA #1604, are required for operation. To install: Remove the four screws that secure the housing halves, clip a battery to each connector, and resecure the two housing halves. Be careful not to pinch any wires.

Representative battery manufacturers and their type numbers are:

Eveready #216, P3
 Burgess #2V6
 Mallory #TR-146X (long life)
 RCA #VS323
 Hellekens #410
 Varta #438
 CEI #6F22

*Patent Pending

SWITCHES-CONTROL-OUTPUT

ON pushbutton switch — The Generator is turned on when this button is pressed momentarily. After a period of at least 5 minutes, the Generator will turn itself off.

OFF pushbutton switch — When this button is pressed momentarily, the Generator is turned off.

Program slide switches — These four switches are used to select the output signal. When a switch slide is moved toward the large trim label, it is in the "1" position. When the switch slide is moved toward the small Heathkit label, it is in the "0" position. The trim label illustrates the various signals that can be displayed on a television. Next to each illustration is the required switch program. **NOTE:** The illustrations on the trim label showing multiple patterns are only representative and do not show actual pattern density. The three color patterns are a rainbow (1111), three color bars (1100), and ten color bars (0001). Figure 4 illustrates the ten bar color sequence. You may not see all ten color bars on some television sets.

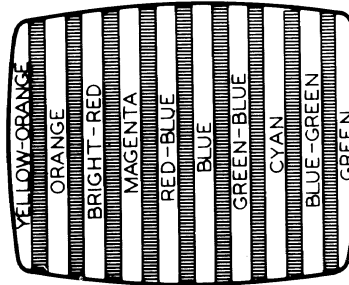


Figure 4

COLOR LEVEL control — Adjusts the color intensity of the three color patterns.

Output cable — Use to connect the generator signal to the VHF terminals of the television set. This is the only connection required. NOTE: The RF carrier frequency is calibrated for channel 4.

USER NOTES

1. Switch off the user accessible automatic control circuits (automatic fine tuning, etc.) while using the Color Generator.
2. When you switch between color and black and white patterns, it may be necessary to fine tune the television for best pattern display.
3. Successful use of the Color Generator requires a properly operating television. You may find, in some older televisions, a particular characteristic that distorts the Generator patterns and cannot be corrected by fine tuning the television. You can generally correct the problem by adjusting oscillator coil L2, inside the Generator. This problem is usually caused by excessive sync requirements, or improper adjustment of the IF and RF AGC in the television.

ALTERNATE CHANNEL OPERATION

The RF oscillator crystal of this Generator is selected for channel 4. If you encounter local interference on channel 4 (channel 4 television transmitter in your area), you can order an alternate crystal for channel 3 from a number of crystal manufacturers. This crystal is now available from the Heath Company under part number 404-601. The following is a list of specifications for the crystal in case you want to purchase it from a crystal manufacturer.

Case Style — HC-18.

Nominal Frequency — 61.25 MHz.

Frequency Tolerance — 0.005%.

Mode of Operation — Fifth overtone.

Maximum Crystal Output Capacitance — 7 pF.

Maximum Series Resistance — 80 Ω .

Load Capacitance — 13 pF.

Drive Level — 2 mW into 60 Ω .

For channel 3 operation, replace crystal Y1 (67.25 MHz) with a 61.25 MHz crystal and replace capacitor C4 (15 pF) with an 18 pF (part number 21-60) ceramic capacitor.

Troubleshooting Chart

PROBLEM	POSSIBLE CAUSE
Generator will not turn on, or will not remain turned on.	<ol style="list-style-type: none">1. Batteries B201 and/or B202 discharged.2. Switch SW202 defective or incorrectly wired.3. Transistor Q2 or Q3 defective.4. Diode D1 reversed or defective.5. Capacitor C1 open.
Generator will not turn off using switch SW201.	<ol style="list-style-type: none">1. Switch SW201 defective or incorrectly wired.2. Resistor R5 open.3. Transistor Q2 shorted.
No RF output.	<ol style="list-style-type: none">1. Inductor L2 incorrectly adjusted.2. Crystal Y1 defective.3. Transistor Q1 defective.4. Capacitor C5 open.

PROBLEM	POSSIBLE CAUSE
RF output, but no video output (blank raster).	<ol style="list-style-type: none">1. Diode D2 defective.2. Control R18 incorrectly adjusted, or defective.3. Integrated circuit IC101 defective.4. Crystal Y101 defective.5. Raster switch program (1010) selected.6. Circuit boards incorrectly wired.
RF and video output, but no color.	<ol style="list-style-type: none">1. Trimmer capacitor C9 incorrectly adjusted.2. Crystal Y2 defective.3. Control R17 turned fully clockwise, or defective.4. Transistors Q4 or Q5 defective.5. Diodes D3, D4, D5, or D6 defective.6. Integrated circuit IC101 defective.7. Improper Color Killer adjustment and/or operation in the television set.8. Capacitor C12 open.

PROBLEM	POSSIBLE CAUSE
Improper video display patterns.	<ol style="list-style-type: none"><li data-bbox="889 327 1263 359">1. Integrated circuit IC101 defective.<li data-bbox="889 384 1268 464">2. Program switches SW101, SW102, SW103, or SW104 defective.

SPECIFICATIONS

Display Patterns*

Raster	Blank.
Horizontal Lines	1, 7, 15.
Vertical Lines	1, 11, 21.
Crosshatch	1 × 1 matrix. 7 × 11 matrix. 15 × 21 matrix.
Dots	1 × 1 matrix. 7 × 11 matrix. 15 × 21 matrix.
Rainbow	No luminance.
Gated Rainbow	3 bars with luminance. 10 bars with luminance.
Chroma Carrier	3563.795 kHz ±0.005%, crystal controlled.
Master Timer	377.616 kHz ±0.005%, crystal controlled.
RF Carrier	Channel 4; 67.250 MHz ±0.005%, crystal controlled. Customer option Channel 3; 61.250 MHz ±0.005%, crystal controlled.
RF Output Level	5000 μV minimum into 300 Ω.

*The density of the displayed pattern depends on the overscan characteristics of the television set.

